Updating Playbase Unit to 4.0

Connecting the USB

- Hold the “+” volume button and the power button simultaneously and plug the unit to the PC

Opening RKAndroid Tool

- Open RKAndroid_v1.29_For_1.33(APK1024M) folder on desktop and open file RKAndroidTool. (Make sure it is the 1.66 loader version)
- Check all boxes except for Backup.

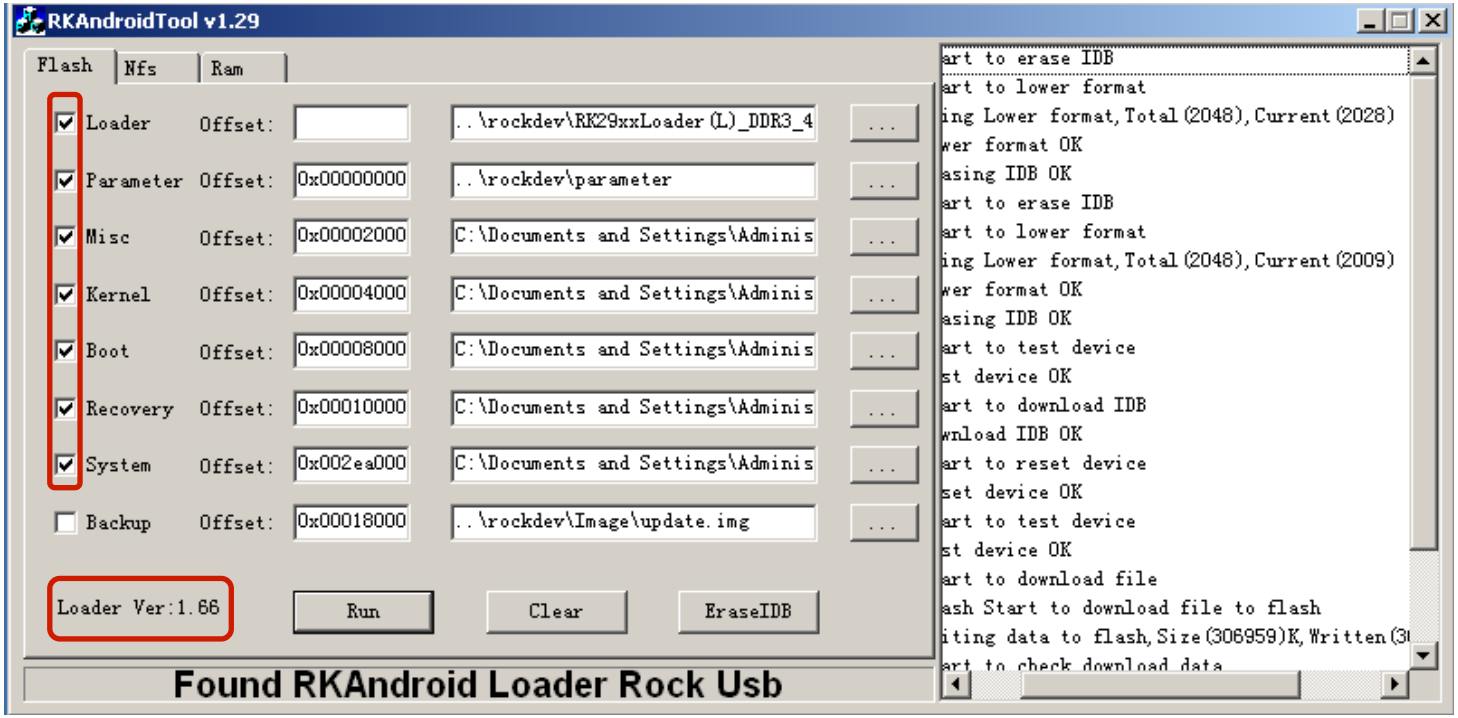

RKAndroid Tool

•For “Misc, Kernel, Boot, Recovery and Systems”-Insert file name accordingly from “Image” folder on Desktop.

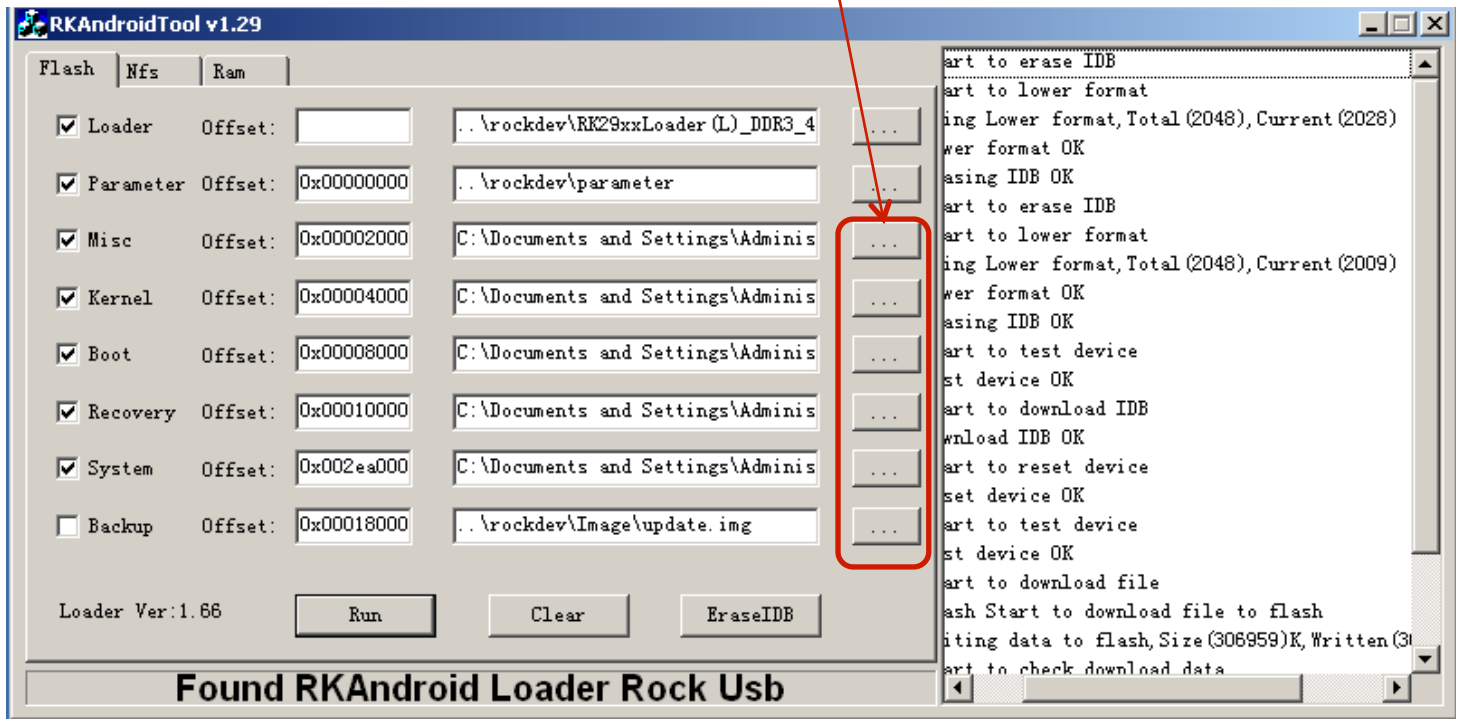

Recognizing the Hardware

- If the PC recognises the hardware, it will show “Found RKAndroid Rock Usb”

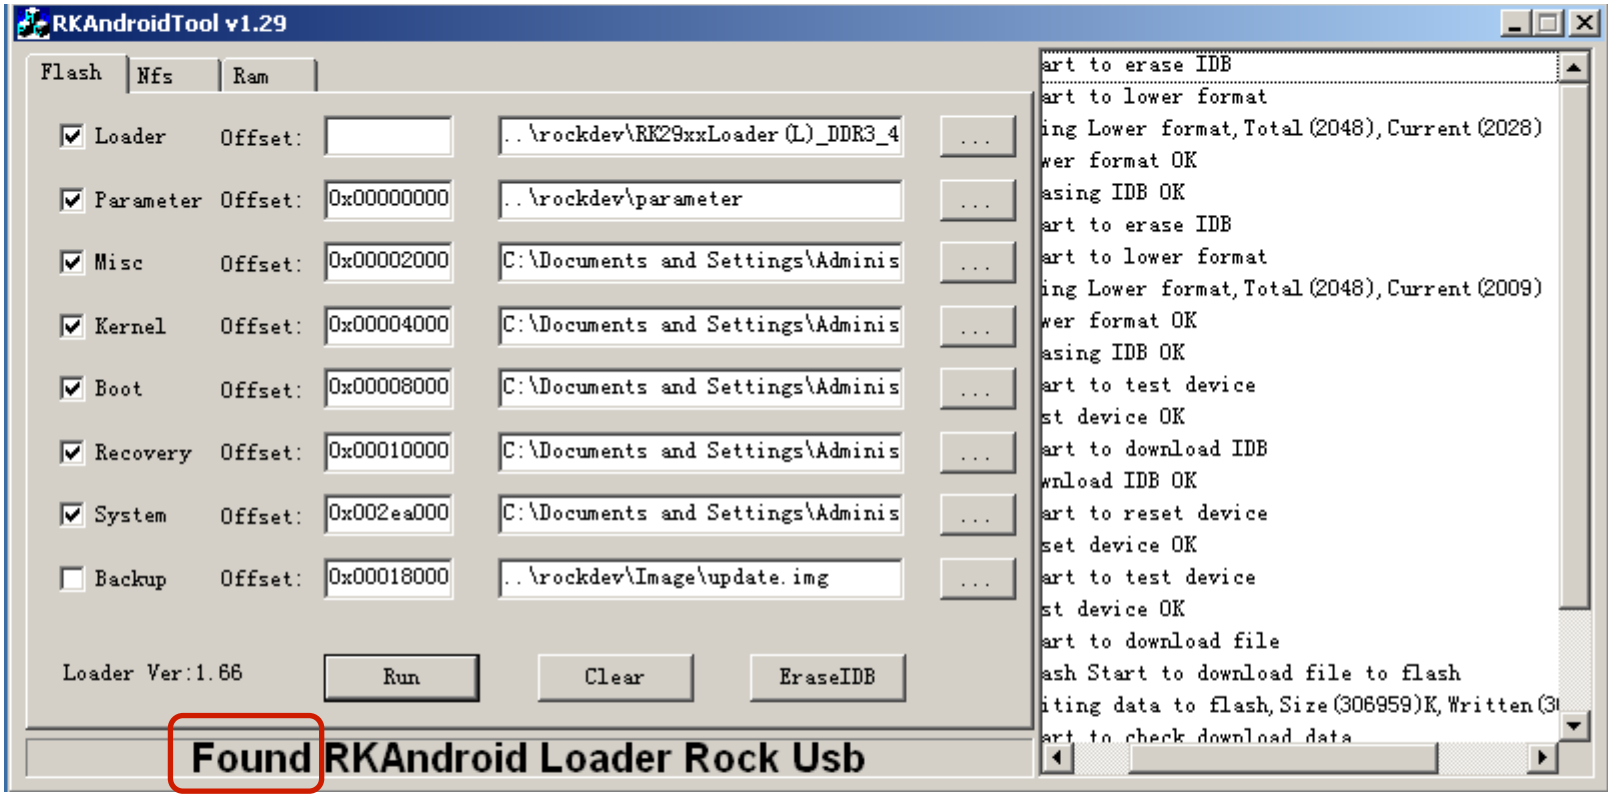

RKAndroid Tool

- Click on EraseIDB. A prompt will pop out once it's done and click OK.

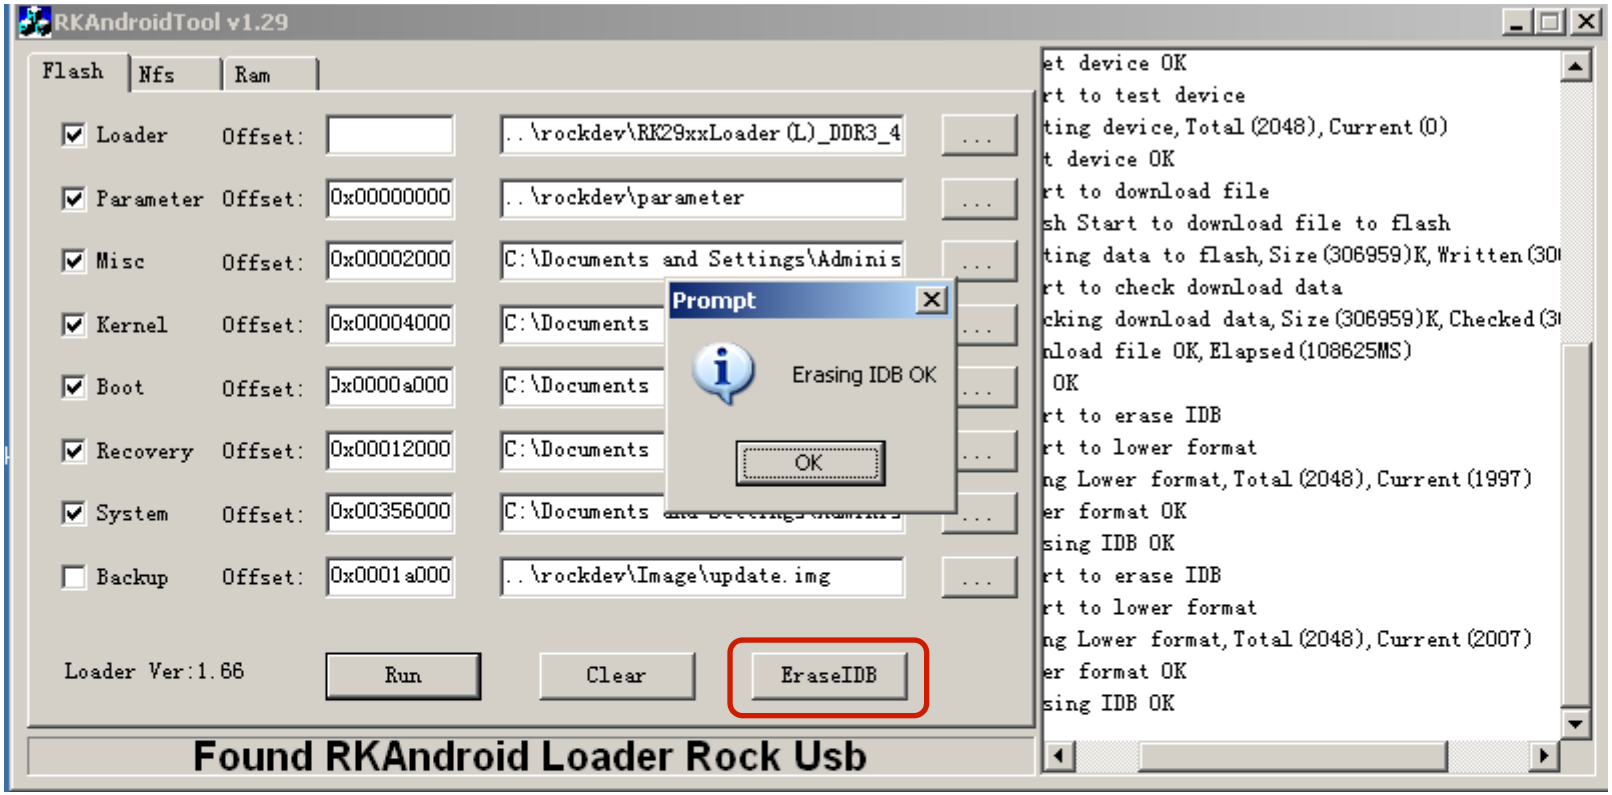

Updating the Software

- Click “Run” and it will start downloading into the hardware. Once done, it will show a message “INFO: Run OK”
- Wait for a few seconds for it to load into the hardware

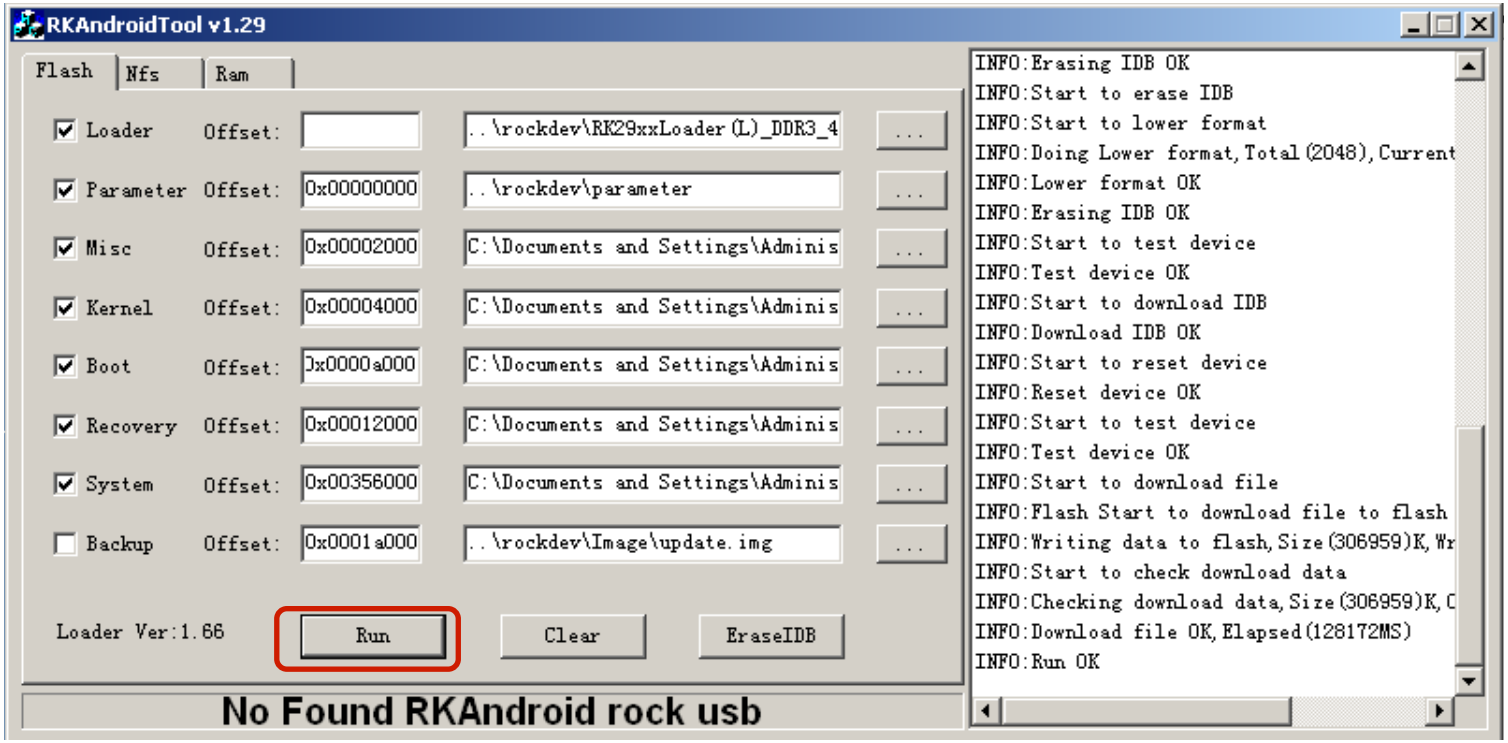

Not Recognised Scenario

- The RKAndroid Tool will state “No Found RKAndroid rock usb”

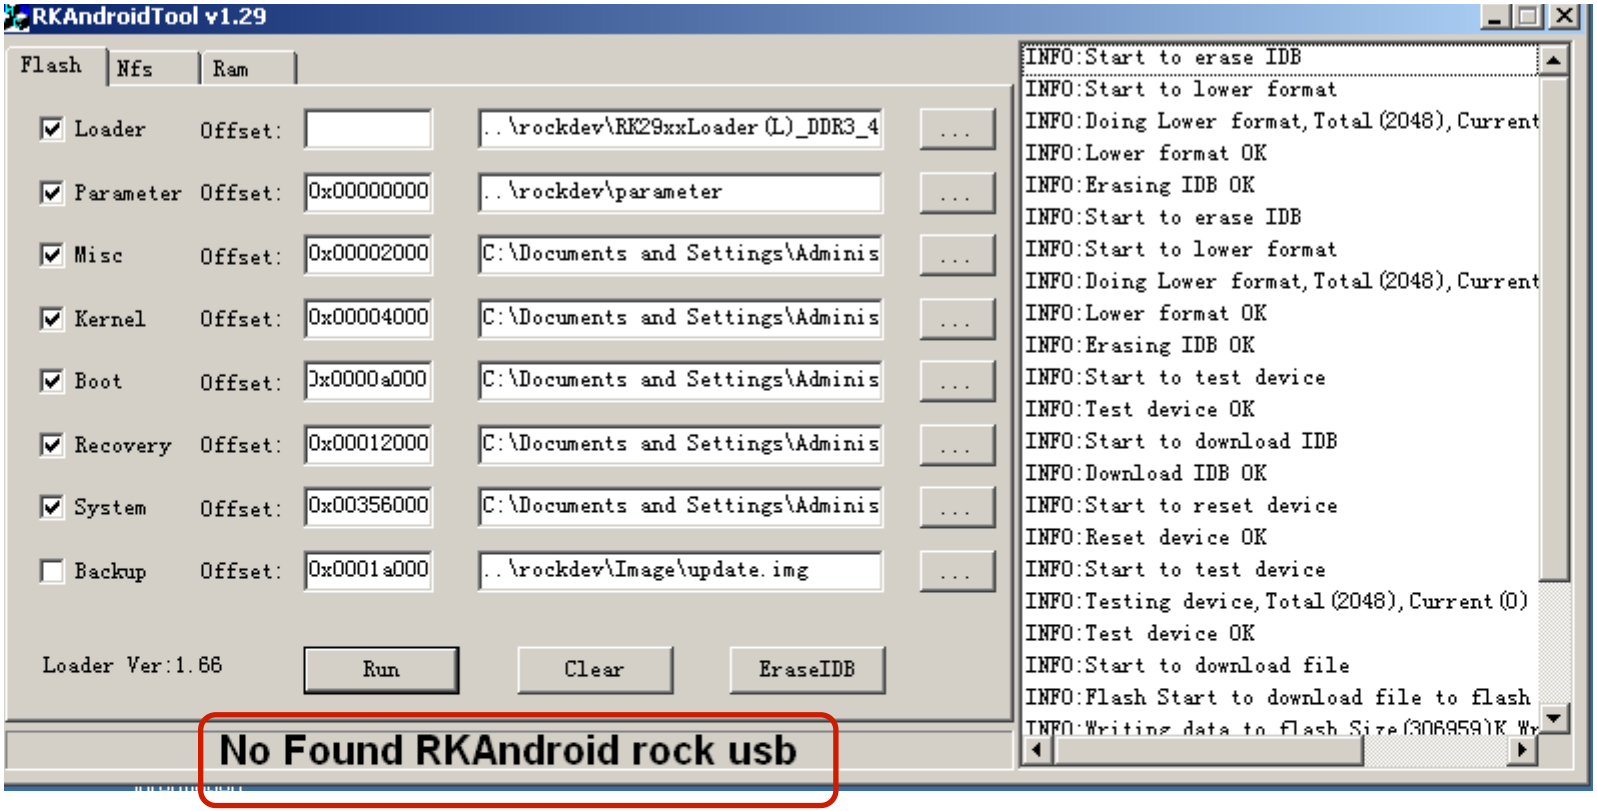

Not Recognised Scenario

- A prompt will appear to install software
- Check the “Install a list or specific Location (advanced) and click Next

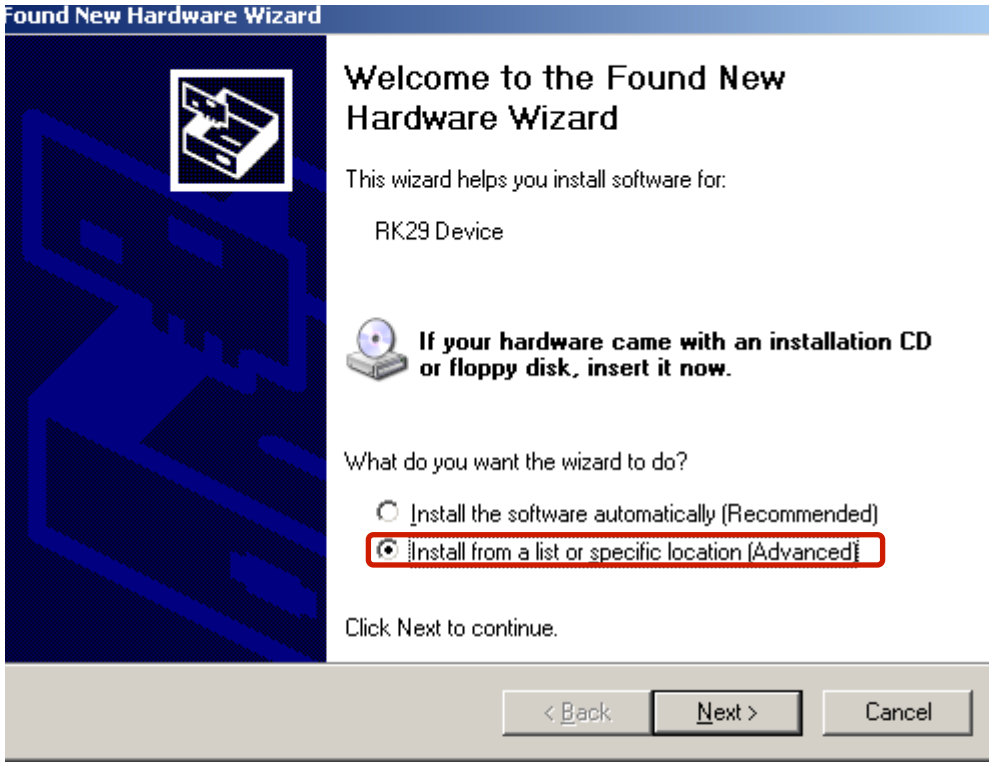
Found New Hardware Wizard
Welcome to the Found New Hardware Wizard
This wizard helps you install software for:
RK29 Device
If your hardware came with an installation CD or floppy disk, insert it now.
What do you want the wizard to do?
Install the software automatically (Recommended)
Install from a list or specific location (Advanced)
Click Next to continue.
< Back
Next >
Cancel

Not Recognised Scenario

- Check on the "Don't search. I will choose the driver to install. Click Nex

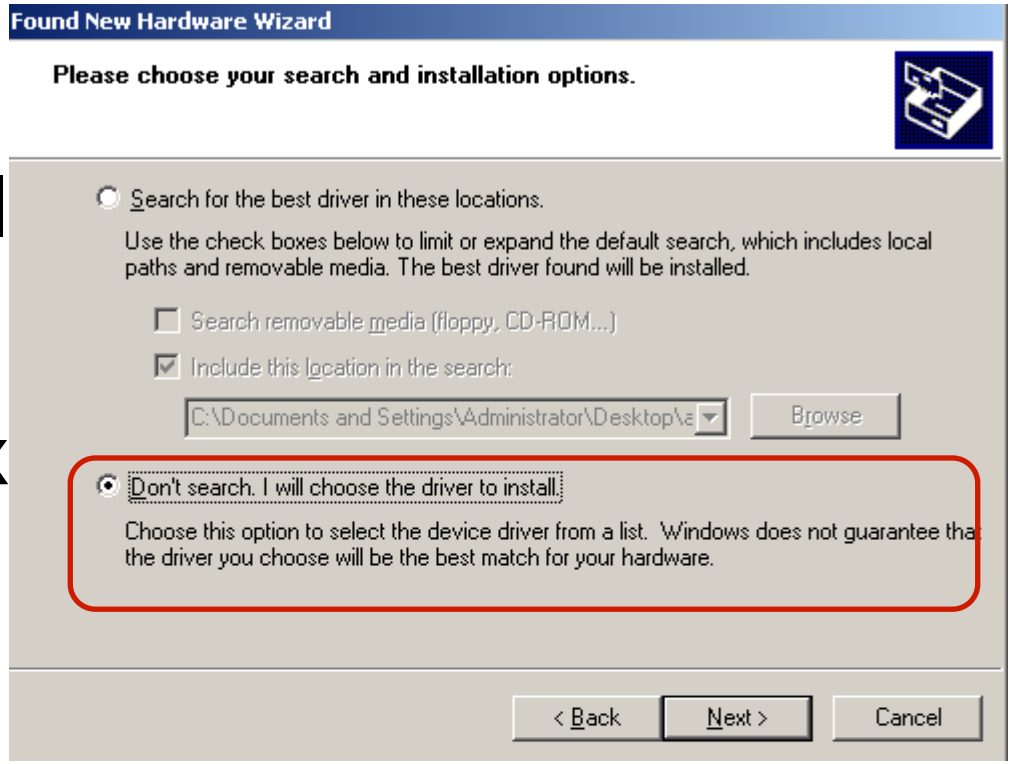
Found New Hardware Wizard
Please choose your search and installation options.
Search for the best driver in these locations.
Use the check boxes below to limit or expand the default search, which includes local paths and removable media. The best driver found will be installed.
Search removable media (floppy, CD-ROM...)
Include this location in the search:
C:\Documents and Settings\Administrator\Desktop\e
Browse
Don't search. I will choose the driver to install.
Choose this option to select the device driver from a list. Windows does not guarantee tha the driver you choose will be the best match for your hardware.
< Back
Next >
Cancel

Not Recognised Scenario

- Click on RK29 Device and click Next. Once done click Finish, and hardware is ready to update. Go back to the 4th slide and start over.

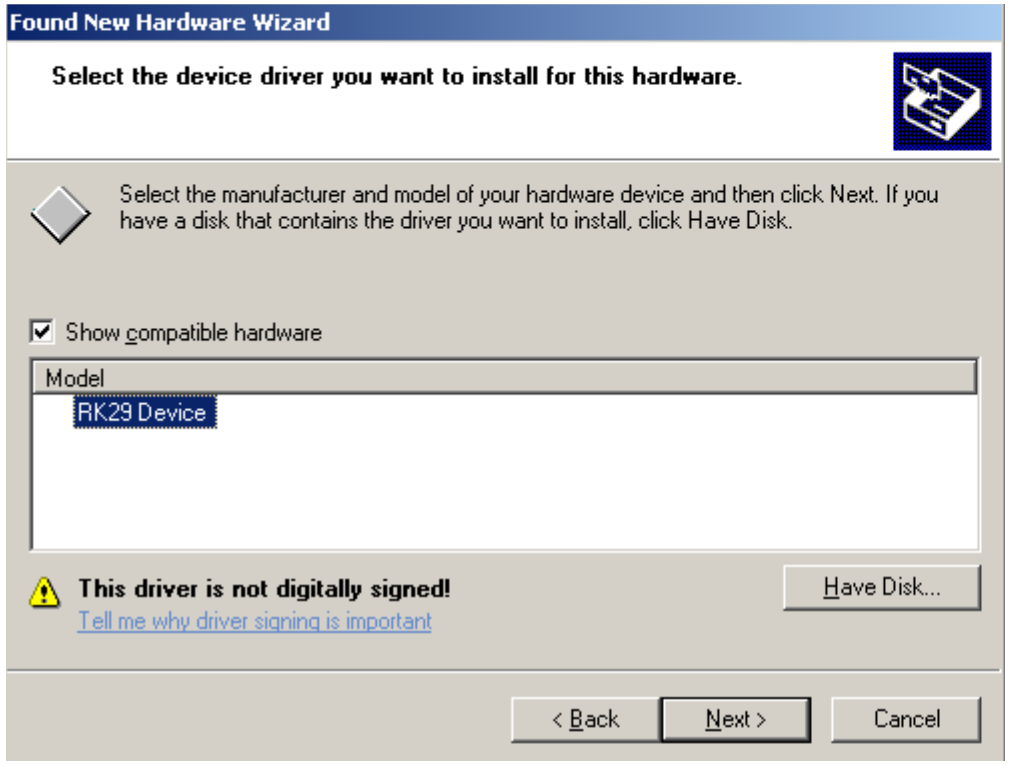
Found New Hardware Wizard
Select the device driver you want to install for this hardware.
Select the manufacturer and model of your hardware device and then click Next. If you have a disk that contains the driver you want to install, click Have Disk.
Show compatible hardware
Model
RK29 Device
This driver is not digitally signed!
Tell me why driver signing is important
Have Disk...
< Back
Next >
Cancel

Things to Take Note

- For the first power on after update, it will take a few minutes, much longer than usual to boot into the main screen
- Important! Wait a few seconds after update before unplugging-the software is booting into the system of the hardware.
- Plug out only after the icon buttons of the unit starts flashing on and off.